




# 1940-41 Renegade Rod Catalog

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

- Reduce Road Noise
- Reduce Exhaust Harmonics
- Eliminate Mechanical Noise
- Stop Body Panel Vibration
- Reduce Radiated & Reflected Heat
- Stop Audio System Vibration

## Pre-Cut Ready to Install Kits Year • Make • Model Specific

The Coolest Cars Have QuietRIDE Inside!™

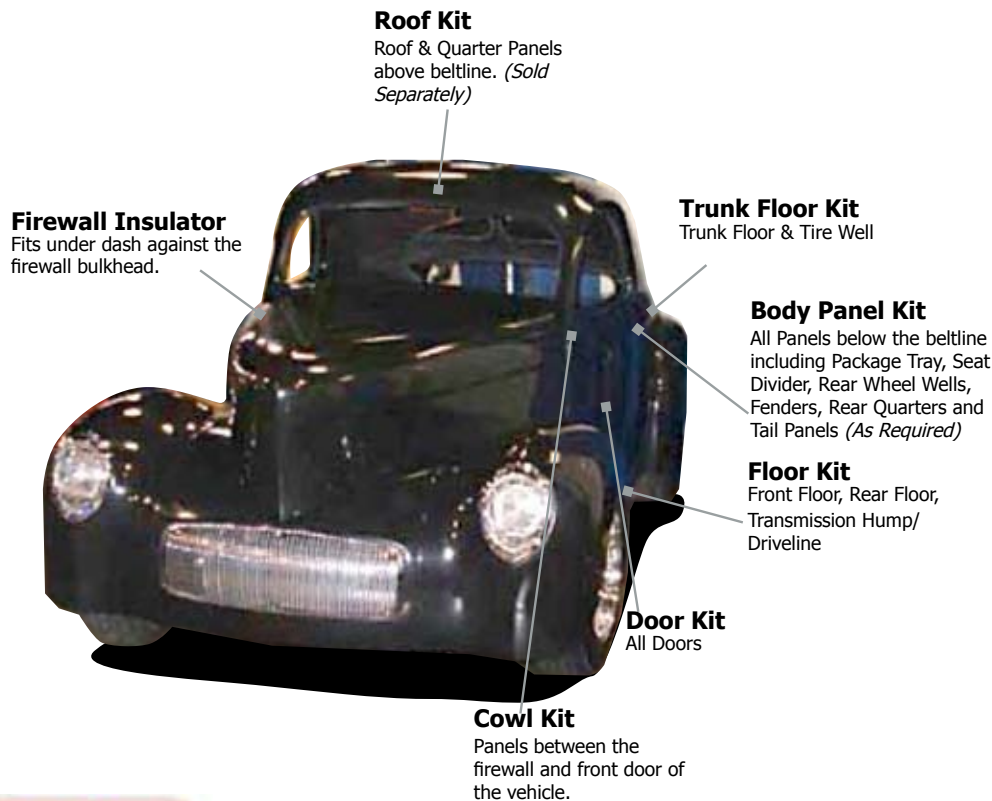

Order On-line

### Everything in One Box to Do the Job Right!

Pre-Cut, Ready To install Kits are Year, Make and Model Specific and include:

- Dynamat Xtreme
- Heat Shield Barrier Insulation
- Spray Adhesive •Seam Tape
- Illustrated Instructions



**QuietRIDE Solutions®**

**Phone:** 209-942-4777

**Fax:** 209-942-4476

6507 Pacific Ave. Ste.#334, Stockton, CA

For more information contact us at: [info@quietride.com](mailto:info@quietride.com)

©2003-12 •Prices Subject to Change Without Notice



Willys Coupe and Roadster

# AcoustiSHIELD™ Pre Cut Kits Ready to Install

## Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

Introducing a multi-stage, automotive insulation and sound damping system to give the Renegade Willys the “quiet riding comfort” found in today’s new cars. AcoustiSHIELD kits are designed on current “state-of-the-art” auto acoustic technology, to insulate and control the noise, vibration and heat in the passenger cabin. Kits are pre-cut and come with easy-to-follow installation instructions-----everything you need to do the job right.



## Turn Your Renegade Willys into “Quiet Riding Comfort”

### Stage 1 Sound Damper Pads



The first stage consists of pre-trimmed, self-adhesive, Sound Damper Pads, bonded to strategically located trouble spots on the floor pan and roof of the vehicle to control body panel vibration and noise. These spots are mapped and labeled in detailed instructions which are included in the kit.

### Stage 2 Heat Absorber/Barrier Panels



The second stage uses a high-tech absorber/barrier material, bonded to the body panels, to both sound deaden and insulate the vehicle from radiant heat penetration from the engine and road. Each absorber panel is cut to the correct shape and contour and is mapped and labeled in the detailed instructions.

#### Kits Include:

- **Stage 1** Pre-Sized Sound Damper Pads
- **Stage 2** Pre-Trimmed Heat Absorber / Barrier Panels, Spray Adhesive and Sealing Tape
- **Complete Illustrated Installation Instruction**

#### To order AcoustiShield for this vehicle:

##### Renegade Rod and Custom

7616 Elevation Road  
Benson, NC 27504

Phone: 919-669-5762  
Fax: 919-207-6105



©2003-12 Quiet Ride Solutions  
Prices Subject to Change  
Without Notice  
[www.quietride.com](http://www.quietride.com)



## Product Application Codes and Price Sheet

**Inventory #      Description      Price      Inventory #      Description      Price**

**1940-41 Willys Renegade Coupe**

|                   |   |     |
|-------------------|---|-----|
| WILLRNG 4041-CAK  | 1940-1941 Willys Renegade Coupe Complete Kit    | 660 |
| WILLRNG 4041-CBPK | 1940-1941 Willys Renegade Coupe Body Panel Kit  | 138 |
| WILLRNG 4041-CCK  | 1940-1941 Willys Renegade Coupe Cowl Kit        | 81  |
| WILLRNG 4041-CDLK | 1940-1941 Willys Renegade Coupe Deck Lid Kit    | 81  |
| WILLRNG 4041-CFK  | 1940-1941 Willys Renegade Coupe Floor/Trunk Kit | 234 |
| WILLRNG 4041-CRK  | 1940-1941 Willys Renegade Coupe Roof Kit        | 106 |
| ASU-DDBIK-2       | Universal 2 Door Damper Kit                     | 52  |

**Other Related Parts For This Vehicle (Sold Separately)**

|                |                               |     |
|----------------|-------------------------------|-----|
| WILLRNG 4100-C | 1941 Willys Renegade Firewall | 103 |
|----------------|-------------------------------|-----|

**1940-41 Willys Renegade Roadster**

|                   |  |     |
|-------------------|--|-----|
| WILLRNG 4041-RAK  | 1940-1941 Willys Renegade Roadster Complete Kit    | 560 |
| WILLRNG 4041-RBPK | 1940-1941 Willys Renegade Roadster Body Panel Kit  | 138 |
| WILLRNG 4041-RCK  | 1940-1941 Willys Renegade Roadster Cowl Kit        | 81  |
| WILLRNG 4041-RDLK | 1940-1941 Willys Renegade Roadster Deck Lid Kit    | 81  |
| WILLRNG 4041-RFK  | 1940-1941 Willys Renegade Roadster Floor/Trunk Kit | 234 |
| ASU-DDBIK-2       | Universal 2 Door Damper Kit                        | 52  |

**Other Related Parts For This Vehicle (Sold Separately)**

|                |                               |     |
|----------------|-------------------------------|-----|
| WILLRNG 4100-C | 1941 Willys Renegade Firewall | 103 |
|----------------|-------------------------------|-----|



| Cowl Kit | Floor Kit | Trunk Kit | Body Kit | Roof Kit |
|----------|-----------|-----------|----------|----------|
|          |           |           |          |          |
|          |           |           |          |          |
|          |           |           |          |          |

**Kits Include:**

- **Stage 1** Pre-Sized Sound Damper Pads
- **Stage 2** Pre-Trimmed Heat Absorber / Barrier Panels, Spray Adhesive and Sealing Tape
- **Complete Illustrated Installation Instruction**

**To order AcoustiShield for this vehicle:**

**Renegade Rod and Custom**

7616 Elevation Road      Phone: 919-669-5762  
 Benson, NC 27504      Fax: 919-207-6105



©2003-12 Quiet Ride Solutions  
 Prices Subject to Change  
 Without Notice  
[www.quietride.com](http://www.quietride.com)



### Firewall Mounting Pin Options For Older Cars and Trucks

American Cars and Trucks used a wide variety of mounting pins, clips, buttons and screws to attach the firewall insulator to the interior of the steel firewall bulkhead. Clean up and reuse your original mounting pins if you have them. We offer the following mounting pins and information based on what we have been able to find available.

#### Early Ford Firewall Mounting Pins

These all steel firewall mounting pins are a reproduction of the originals. They are available in a 3/4 inch length (Long) and in a 1/2 inch length (Short). The long pins work best for the early production cars and trucks. The Short pin works best for the 1942-48 cars and 1940-47 Trucks. The long pins may have been used in Ford cars as late as 1954. The short pins may have been used in Ford Trucks through the mid 1950s.



- Ford 3541-MPL 1935-41 Ford Firewall Mounting Pin-Long ..... \$3**
- Ford 4147-MPS 1941-47 Ford Firewall Mounting Pin-Short ..... \$3**

#### GM Firewall Mounting Plugs

General Motors started using a plastic firewall mounting plug to attach the insulator in the mid 1950s--1955 for Trucks and 1957 for Cars. These plugs are still used in GM vehicles today.



- GM 5500-MP 1955 to Present General Motors Mounting Plug ..... \$3**

#### Street Rod Mounting Pins

With this new mounting pin kit, you can weld up your firewall mounting holes and install any of our insulators for that "smoothie look." Kit includes nine pin-sets and installation instructions.



- SRMP Street Rod Firewall Mounting Pin Kit ..... \$34**

#### Universal Mounting Pins

If your original firewall mounting pins are missing or damaged beyond repair, these universal pins may be a solution. They are a plastic "Christmas tree" type pin that will fit most 5/16 inch holes. Kit includes 10 pins.



- UMPS-10 Universal Mounting Pin Set ..... \$20**

#### Universal Wire Cap

A variety of car and truck manufacturers in the 1930s used a wire cap retainer to mount the firewall insulator. These are still available in a Long (1/2 inch) and Short (1/4 inch) variety and have a 1/2 inch button head that can be painted. To match the firewall color.



- UWC-MPL Universal Wire Cap Mounting Pin Long ..... \$1**
- UWC-MPS Universal Wire Cap Mounting Pin Short ..... \$1**