AcoustiHOOD

Underhood Cover and Insulation Shield

1964-66 Mustang Fastback Trunk Deck

PN: MUST 6466-FBUTC

No Mounting Pins

Kit Contents:
- Pre-Trimmed HeatShield Trunk Insulation Panels
- Spray Adhesive (14 oz.)
- Roll Aluminum Foil Tape

Materials Needed for Installation:
- TSP or household cleaner
- Masking Tape
- Power Drill
- 1/4" metal drill bit

Prerequisites: Installation of any AcoustiShield product begins with preparation of the interior metal surfaces. All panels must:

- Be thoroughly cleaned, washed and painted (recommended). Over time, adhesive material will not stick to dusty, dirty, grimy, body panel surfaces.
- Be bone dry.
- Be sure that the temperature of metal surface is above 70 degrees.

Please Open and Inspect Your Packing Slip and Products Immediately!

This product was reproduced for the year, make and model of the vehicle you specified in your order. However, there may be some variations between models in any given year of manufacture. If you find that this product does not fit your vehicle exactly, contact us immediately.

Product Brand Identification

If you ordered an Under Trunk Cover with a Ford Motor Company brand name and/or logo image----------you will find an Official Licensed Product label on the back of the panel.

Tech Tip: It is much easier to work on the trunk right side up than upside down. Remove trunk and lay out on a work bench or table--be sure to protect the paint surface with a soft blanket.

QRS TV

Watch our "How To" video on the Installation of a typical Under Hood Cover and Insulation

Go To:
www.quietride.com/qrs_tv.html

Products that have been modified cannot be returned or exchanged.
No Returns or Refunds will be accepted after 90 Days.

Thank you for your order

This product was made with quality and pride by:

Name:_____Date:_____

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777 • FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com

QuietRIDE Solutions™

©Quiet Ride Solutions All Rights Reserved

AcoustiSHIELD®

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat



Pre-Cut, Ready-to-Install Thermal Acoustic Insulation Kits for 1.300 Cars & Trucks

It takes Two insulation materials to do the Job right!

AcoustiSHIELD a multi-stage, automotive insulation and sound damping system to give the passenger cabin of older cars and trucks the "quiet riding comfort" found in today's new cars.

AcoustiSHIELD kits are designed with "state-of-the-art" thermal acoustic automotive technology, to insulate and control the noise, vibration and heat in the passenger cabin.

AcoustiSHIELD:
- Reduces Road Noise
- Reduces Exhaust Harmonics
- Eliminates Mechanical Noise
- Stops Body Panel Vibration
- Reduces Radiated & Reflected Heat
- Stops Audio System Vibration

QuietRIDE products create an "Acoustic Envelop" inside the Vehicle--from the firewall to the tail lights.

STOP Noise STOP Vibration STOP Heat

Pre-Installation of the Under Trunk Cover Components




Set Up Step-1 Open the package of Heat-Shield insulation panels and lay them into position.



Set Up Step-2 Pre-Install the ABS Under Trunk Cover into position, lining up the mounting holes in the cover with the mounting holes in the trunk.

Set Up Step-3 Mask out the edge of the Under Trunk Cover by placing strips of masking tape around the perimeter of the cover to protect the edge of the trunk from "over spray" adhesive. Be sure to keep the aluminum seam tape below this edge so that it does not show when finished.

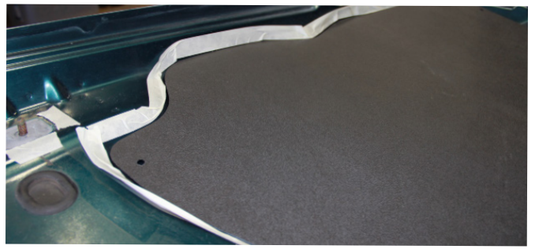

Installing the HeatShield Hood Insulation Panels

HS Step-1 Spray the fiber-side of the Heat-Shield with two light coats of contact spray adhesive.


HS Step-2 Spray the corresponding section of the hood with two light coats of contact spray adhesive.

HS Step-3 Let both surfaces "tack" dry to touch.

HS Step-4 Lightly position the HeatShield panel between the ribs of the trnnk braces. When you have the panel "centered," press it into position with hand pressure across the entire surface.

HS Step-5 Repeat the installation of the other HeatShield insulation panels.

HS Step-6 Seal the edges of the HeatShield panels with the seam tap by overlapping the edge of the insulation and the trunk rib, as illustrated.

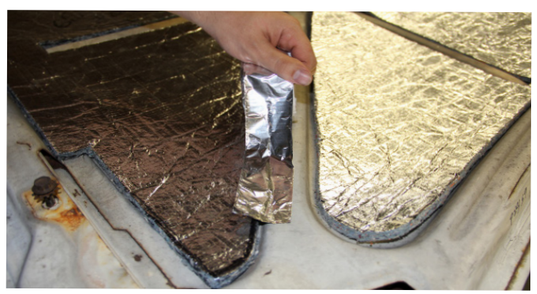

Install the seam tape around the edge of each of the insulation panels--overlapping the tape on to the rib of the trunk.

Installing the ABS Under Trunk Covers in the 1964-66 Mustang Fastback

Insert the Center Mounting Pins first. Then insert the perimeter mounting pins around the outside edges.

Note: Some Trunk Covers use the the trunk hinge mounting holes.



