Ford Truck

AcoustiSHIELD™

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

1935-36 Ford Truck Cowl Kit Installation

P/N: FORD 3536-TCK



The materials in this kit are designed on a "two-stage" acoustic principal which bonds multiple layers of state -of-the art automotive insulation material to the body panels to minimize mechanical and environmental noise, heat, and vibration.

Kit Contents:
- Pre-Trimmed Heat Absorber/Barrier Panels
- Spray Adhesive (14 oz.)
- Roll Aluminum Foil Tape

Tools Needed for Installation:
- Sharp knife and scissors
- Wallpaper seam roller
- Felt tip marker

Prerequisites: Installation of any AcoustiShield product begins with preparation of the interior metal surfaces. All panels must:

- Be thoroughly cleaned, washed and painted (recommended). Over time, adhesive material will not stick to dusty, dirty, grimy, body panel surfaces.
- Be bone dry.
- Be sure that the temperature of metal surface is above 70 degrees.

Study the illustrations provided on the back of this installation guide, comparing them to the cowl of your truck. You should easily be able to locate where to apply the damper pads.

Installation Procedures:

Applying the Heat Absorber/Barrier

Diagram A-1 illustrates the approximate size and shape of the pre-trimmed, ready-to-install Cowl Absorber/Barrier Panels and the location they will be installed in the lower cowl under the dash side cowls in front of each door. Lay the panels on a flat surface, aluminum side facing up, smoothing the material out as you go. Turn the absorber material over, fiberous side up, and place into position. Some "nipping" of the edges with the scissors may be required. Spray glue to the fibrous side of the absorber panels and set aside to dry. Spray glue to the corresponding section of the cowl to which this panel will be applied.

Now STOP and let everything dry--this is the key to permanent adhesion. When the glued surface is "dry to touch" it is ready to be installed .

Place the absorber panel into position, and "lightly" tack it in place. When you are satisfied with the way the panel lays in place, permanently adhere it to the cowl by applying hand pressure to material, smoothing it as you go.

The final step is to apply the aluminum tape to all seams and edges of the material. Measure out a length of tape and peel back a few inches the protective film, exposing the self-adhesive backing. Overlap the seams and edges evenly and apply hand pressure along the entire length of the tape to seal it against the heat absorber/barrier material and the cowl structure.

Thank you for your order

This product was made with quality and pride by:

Name:_____Date:_____

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777 • FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com

QuietRIDE Solutions™

©Quiet Ride Solutions 2009 All Rights Reserved | Rev. 2009


Diagram A-1 | # Heat Absorber/Barrier Installation

*Ready to tape Cowl Panel



Side Cowl

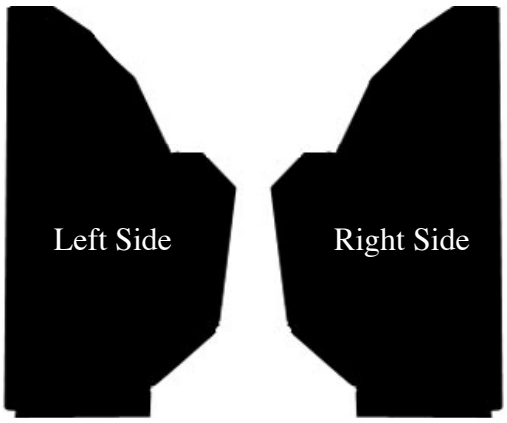Pre-trimmed heat shield





*After gluing the cowl absorber material in their proper location, use the aluminum tape to cover and seal all the seams of the seperate pieces. Also tape the perimeter edge of the floor absorber.

Ford Truck

AcoustiSHIELD™

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

1935-36 Ford Truck Floor Kit Installation

P/N: FORD 3536-TFK



The materials in this kit are designed on State-of-the-Art, "multiple-stage" automotive acoustic principles which bonds layers of insulation material to the vehicle body panels to control mechanical and environmental noise, vibration, and heat.

Kit Contents:
- Sound Deadener Pads
- Pre-Trimmed Heat Absorber/Barrier Panels
- Spray Adhesive(14 oz.)
- Roll Aluminum Foil Tape

Tools Needed for Installation:
- Sharp knife and scissors
- Wallpaper seam roller
- Felt tip marker

Prerequisites: Installation of any AcoustiShield product begins with preparation of the interior metal surfaces. All panels must:

- Be thoroughly cleaned, washed and painted (recommended). Over time, adhesive material will not stick to dusty, dirty, grimy, body panel surfaces.
- Be bone dry.
- Be sure that the temperature of metal surface is above 70 degrees.

Thank you for your order

This product was made with quality and pride by:

Name:_____Date:_____

Study the illustrations provided on the back of this installation guide, comparing them to the floor of your truck. You should easily be able to locate where to apply the damper pads.

Installation Procedures:

1. Applying the Damper Pads and Strips

Sweep any debris off the floor pan and layout the Sound Damper Pads and Strips according to **Diagram A-1**. When you are satisfied that all the damper pads and strips are in their correct location, remove the protective film from each pad, exposing the self-adhesive surface, and "lightly tack" the pad in place.

Using the wallpaper seam roller, "pressure roll" the Damper pads or strips to the metal skin of the floor, removing all air gaps so that the adhesive backing firmly grips the metal. Work the roller across the damper material from the center toward the edge.

2. Applying the Heat Absorber/Barrier

Diagram B-1 illustrates the approximate size and shape of the pre-trimmed, ready-to-install Heat Absorber/Barrier panels and the location they will be installed in the floor pan. Lay the panels into the floor pan, aluminum side facing up, smoothing the material out as you go. Make sure that the edges "butt" tightly against each other. Some "nipping" of the edges with the scissors may be required. Using the marking pen, trace the edges of the panels on the floor pan for guide lines when you begin the gluing process. Spray glue to the fibrous side of a absorber panel and set it aside to dry. Spray glue to the corresponding section of the floor to which this panel will be applied.

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777 • FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com


QuietRIDE Solutions™


©Quiet Ride Solutions 2009 All Rights Reserved | Rev. 2009

Diagram B-1 | Sound Damper Material Installation

9 Sound Damper Pads and Strips
B -- 6
I -- 1
J -- 1
L -- 1

When you are satisfied with the arrangement of damper pads and strips, pressure roll them on to the metal surface with a wallpaper seam roller as illustrated.

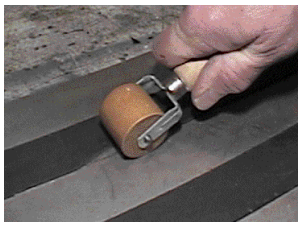

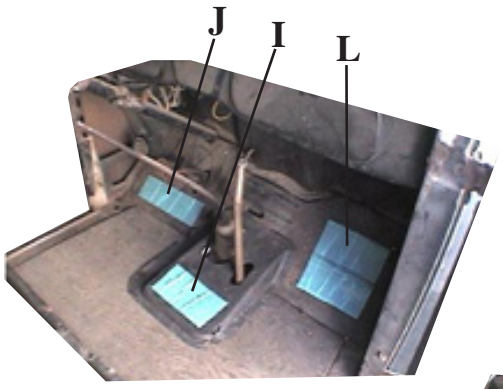


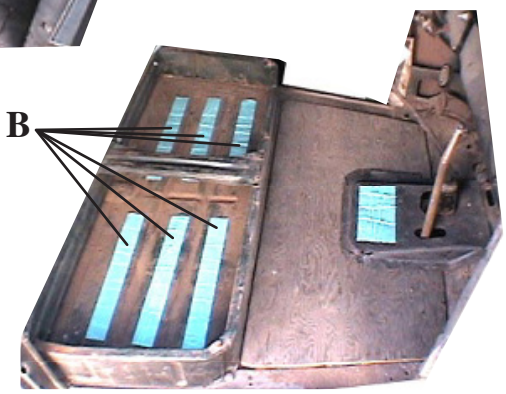


Diagram B-1 | Heat Absorber/Barrier Installation

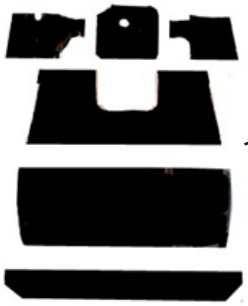
*Install the aluminum tape to cover and seal all seams and edges of the separate panels. Also tape around the perimeter edges of the floor absorber.



Pre-trimmed heat shield



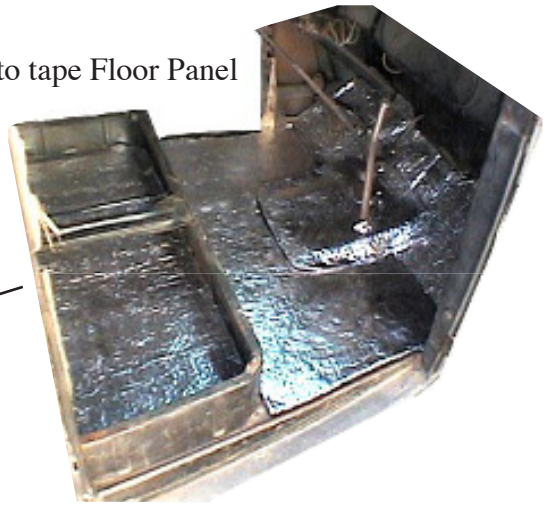*Ready to tape Floor Panel



Now STOP and let everything dry--this is the key to permanent adhesion. When the glued surface is "dry to touch" it is ready to be installed. Following the guide lines you marked on the floor panel, place the Heat Shield Insulation pattern into position, and "lightly" tack it in place. When you are satisfied with the way the panel lays in place, permanently adhere it to the floor panel by applying hand pressure to material, smoothing it as you go. Complete the installation process for all of the Heat Shield Insulation patterns. The final step is to apply the aluminum tape to all seams and edges of the material. Measure out a length of tape and peel back a few inches of the protective film, exposing the self-adhesive backing. Overlap the seams and edges evenly and apply hand pressure along the entire length of the tape to seal it against the Heat Shield material and the floor panel.

Ford Truck

AcoustiSHIELD™

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

1935-36 Ford Truck Rear Cab Kit Installation

P/N: FORD 3536-TRCK



The materials in this kit are designed on State-of-the-Art, "multiple-stage" automotive acoustic principles which bonds layers of insulation material to the vehicle body panels to control mechanical and environmental noise, vibration, and heat.

Kit Contents:
- Sound Deadener Pads
- Pre-Trimmed Heat Absorber/Barrier Panels
- Spray Adhesive(14 oz.)
- Roll Aluminum Foil Tape

Tools Needed for Installation:
- Sharp knife and scissors
- Wallpaper seam roller
- Felt tip marker

Prerequisites: Installation of any AcoustiShield product begins with preparation of the interior metal surfaces. All panels must:

- Be thoroughly cleaned, washed and painted (recommended). Over time, adhesive material will not stick to dusty, dirty, grimy, body panel surfaces.
- Be bone dry.
- Be sure that the temperature of metal surface is above 70 degrees.

Thank you for your order

This product was made with quality and pride by:

Name:_____Date:_____

Study the illustrations provided on the back of this installation guide, comparing them to the rear cab of your truck. You should easily be able to locate where to apply the damper pads.

Installation Procedures:

1. Applying the Damper Pads and Strips

Sweep any debris off the rear cab pan and layout the Sound Damper Pads and Strips according to **Diagram A-1**. When you are satisfied that all the damper pads and strips are in their correct location, remove the protective film from each pad, exposing the self-adhesive surface, and "lightly tack" the pad in place.

Using the wallpaper seam roller, "pressure roll" the Damper pads or strips to the metal skin of the rear cab, removing all air gaps so that the adhesive backing firmly grips the metal. Work the roller across the damper material from the center toward the edge.

2. Applying the Heat Absorber/Barrier

Diagram B-1 illustrates the approximate size and shape of the pre-trimmed, ready-to-install Heat Absorber/Barrier panels and the location they will be installed in the rear cab pan. Lay the panels into the rear cab pan, aluminum side facing up, smoothing the material out as you go. Make sure that the edges "butt" tightly against each other. Some "nipping" of the edges with the scissors may be required. Using the marking pen, trace the edges of the panels on the rear cab pan for guide lines when you begin the gluing process. Spray glue to the fibrous side of a absorber panel and set it aside to dry. Spray glue to the corresponding section of the rear cab to which this panel will be applied.

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777 • FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com

QuietRIDE Solutions™

©Quiet Ride Solutions 2009 All Rights Reserved | Rev. 2009

Diagram B-1 | Sound Damper Material Installation

7 Sound Damper Pads and Strips
C -- 7

When you are satisfied with the arrangement of damper pads and strips, pressure roll them on to the metal surface with a wallpaper seam roller as illustrated.

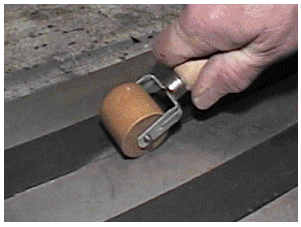


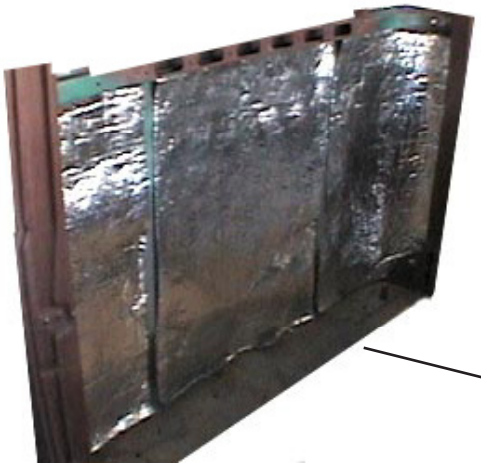


Diagram B-1 | Heat Absorber/Barrier Installation

*Install the aluminum tape to cover and seal all seams and edges of the separate panels. Also tape around the perimeter edges of the floor absorber.



*Ready to tape Floor Panel



Pre-trimmed heat shield



Now STOP and let everything dry--this is the key to permanent adhesion. When the glued surface is "dry to touch" it is ready to be installed. Following the guide lines you marked on the rear cab panel, place the Heat Shield Insulation pattern into position, and "lightly" tack it in place. When you are satisfied with the way the panel lays in place, permanently adhere it to the rear cab panel by applying hand pressure to material, smoothing it as you go. Complete the installation process for all of the Heat Shield Insulation patterns. The final step is to apply the aluminum tape to all seams and edges of the material. Measure out a length of tape and peel back a few inches of the protective film, exposing the self-adhesive backing. Overlap the seams and edges evenly and apply hand pressure along the entire length of the tape to seal it against the Heat Shield material and the rear cab panel.

Ford Truck

AcoustiSHIELD™

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

1935-36 Ford Truck (Single-Bow) Roof Kit Installation

P/N: 3536 FORD-TRK



The materials in this kit are designed on State-of-the-Art, "multiple-stage" automotive acoustic principles which bonds layers of insulation material to the vehicle body panels to control mechanical and environmental noise, vibration, and heat.

Kit Contents:
- Sound Deadener Pads
- Pre-Trimmed Heat Absorber/Barrier Panels
- Spray Adhesive(14 oz.)
- Roll Aluminum Foil Tape

Tools Needed for Installation:
- Sharp knife and scissors
- Wallpaper seam roller
- Felt tip marker

Prerequisites: Installation of any AcoustiShield product begins with preparation of the interior metal surfaces. All panels must:

•Be thoroughly cleaned, washed and painted (recommended). Over time, adhesive material will not stick to dusty, dirty, grimy, body panel surfaces.
•Be bone dry.
•Be sure that the temperature of metal surface is above 70 degrees.

Thank you for your order

This product was made with quality and pride by:

Name:_____Date:_____

Study the illustrations provided on the back of this installation guide, comparing them to the roof of your truck. You should easily be able to locate where to apply the damper pads.

Installation Procedures:

1. Applying the Damper Pads and Strips

Sweep any debris off the roof pan and layout the Sound Damper Pads and Strips according to **Diagram A-1**. When you are satisfied that all the damper pads and strips are in their correct location, remove the protective film from each pad, exposing the self-adhesive surface, and "lightly tack" the pad in place.

Using the wallpaper seam roller, "pressure roll" the Damper pads or strips to the metal skin of the roof, removing all air gaps so that the adhesive backing firmly grips the metal. Work the roller across the damper material from the center toward the edge.

2. Applying the Heat Absorber/Barrier

Diagram B-1 illustrates the approximate size and shape of the pre-trimmed, ready-to-install Heat Absorber/Barrier panels and the location they will be installed in the roof pan. Lay the panels into the roof pan, aluminum side facing up, smoothing the material out as you go. Make sure that the edges "butt" tightly against each other. Some "nipping" of the edges with the scissors may be required. Using the marking pen, trace the edges of the panels on the roof pan for guide lines when you begin the gluing process. Spray glue to the fibrous side of a absorber panel and set it aside to dry. Spray glue to the corresponding section of the roof to which this panel will be applied.

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777 • FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com

QuietRIDE Solutions™

©Quiet Ride Solutions 2009 All Rights Reserved | Rev. 2009

Diagram B-1 | Sound Damper Material Installation

8 Sound Damper Pads and Strips
J -- 2
B -- 6

When you are satisfied with the arrangement of damper pads and strips, pressure roll them on to the metal surface with a wallpaper seam roller as illustrated.


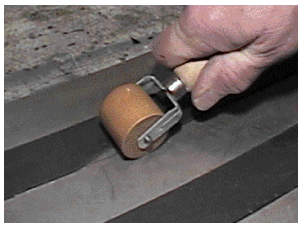




Diagram B-1 | Heat Absorber/Barrier Installation

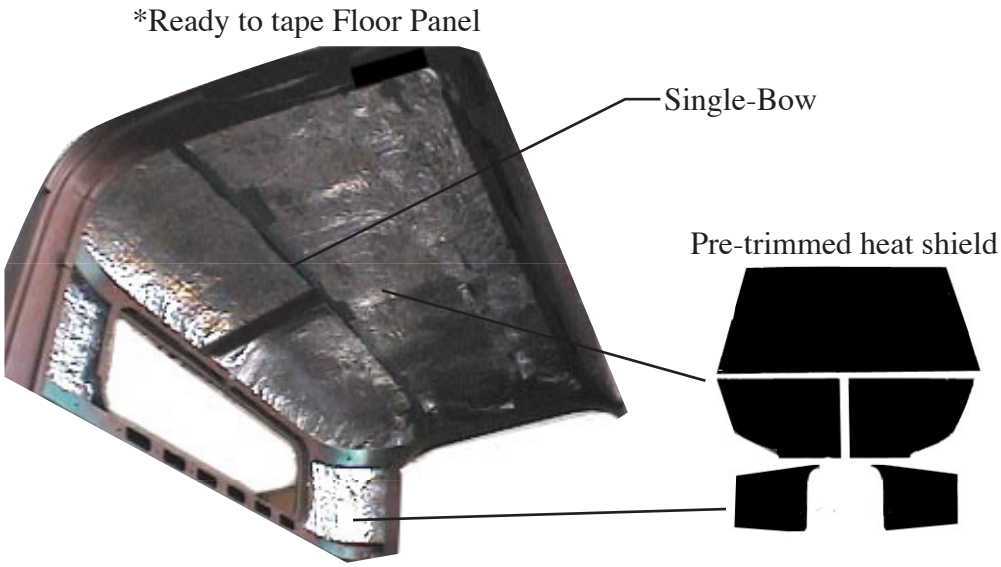*Install the aluminum tape to cover and seal all seams and edges of the separate panels. Also tape around the perimeter edges of the floor absorber.





Now STOP and let everything dry--this is the key to permanent adhesion. When the glued surface is "dry to touch" it is ready to be installed.
Following the guide lines you marked on the roof panel, place the Heat Shield Insulation pattern into position, and "lightly" tack it in place. When you are satisfied with the way the panel lays in place, permanently adhere it to the roof panel by applying hand pressure to material, smoothing it as you go. Complete the installation process for all of the Heat Shield Insulation patterns. The final step is to apply the aluminum tape to all seams and edges of the material. Measure out a length of tape and peel back a few inches of the protective film, exposing the self-adhesive backing. Overlap the seams and edges evenly and apply hand pressure along the entire length of the tape to seal it against the Heat Shield material and the roof panel.

Ford Truck

AcoustiSHIELD™

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

1935-36 Ford Truck (Double-Bow) Roof Kit Installation

P/N: 3536 FORD-TRK



The materials in this kit are designed on State-of-the-Art, "multiple-stage" automotive acoustic principles which bonds layers of insulation material to the vehicle body panels to control mechanical and environmental noise, vibration, and heat.

Kit Contents:
- Sound Deadener Pads
- Pre-Trimmed Heat Absorber/Barrier Panels
- Spray Adhesive(14 oz.)
- Roll Aluminum Foil Tape

Tools Needed for Installation:
- Sharp knife and scissors
- Wallpaper seam roller
- Felt tip marker

Prerequisites: Installation of any AcoustiShield product begins with preparation of the interior metal surfaces. All panels must:

•Be thoroughly cleaned, washed and painted (recommended). Over time, adhesive material will not stick to dusty, dirty, grimy, body panel surfaces.
•Be bone dry.
•Be sure that the temperature of metal surface is above 70 degrees.

Thank you for your order

This product was made with quality and pride by:

Name:_____Date:_____

Study the illustrations provided on the back of this installation guide, comparing them to the roof of your truck. You should easily be able to locate where to apply the damper pads.

Installation Procedures:

1. Applying the Damper Pads and Strips

Sweep any debris off the roof pan and layout the Sound Damper Pads and Strips according to **Diagram A-1**. When you are satisfied that all the damper pads and strips are in their correct location, remove the protective film from each pad, exposing the self-adhesive surface, and "lightly tack" the pad in place.

Using the wallpaper seam roller, "pressure roll" the Damper pads or strips to the metal skin of the roof, removing all air gaps so that the adhesive backing firmly grips the metal. Work the roller across the damper material from the center toward the edge.

2. Applying the Heat Absorber/Barrier

Diagram B-1 illustrates the approximate size and shape of the pre-trimmed, ready-to-install Heat Absorber/Barrier panels and the location they will be installed in the roof pan. Lay the panels into the roof pan, aluminum side facing up, smoothing the material out as you go. Make sure that the edges "butt" tightly against each other. Some "nipping" of the edges with the scissors may be required. Using the marking pen, trace the edges of the panels on the roof pan for guide lines when you begin the gluing process. Spray glue to the fibrous side of a absorber panel and set it aside to dry. Spray glue to the corresponding section of the roof to which this panel will be applied.

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777 • FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com

QuietRIDE Solutions™

©Quiet Ride Solutions 2009 All Rights Reserved | Rev. 2009

Diagram B-1 | Sound Damper Material Installation

8 Sound Damper Pads and Strips
J -- 2
B -- 6

When you are satisfied with the arrangement of damper pads and strips, pressure roll them on to the metal surface with a wallpaper seam roller as illustrated.


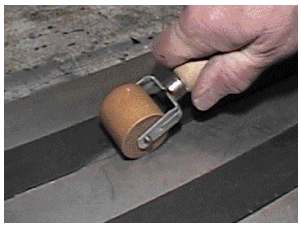




Diagram B-1 | Heat Absorber/Barrier Installation

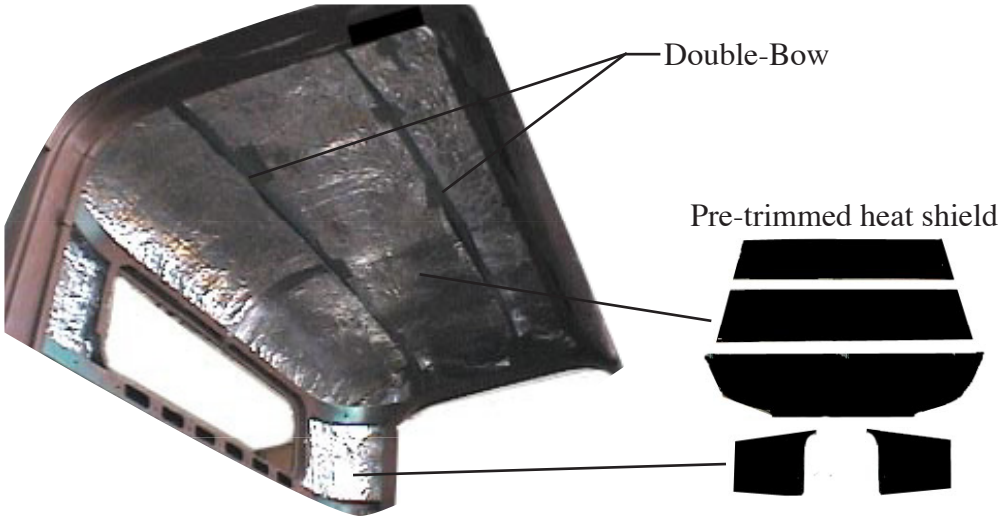*Install the aluminum tape to cover and seal all seams and edges of the separate panels. Also tape around the perimeter edges of the floor absorber.





Now STOP and let everything dry--this is the key to permanent adhesion. When the glued surface is "dry to touch" it is ready to be installed.
Following the guide lines you marked on the roof panel, place the Heat Shield Insulation pattern into position, and "lightly" tack it in place. When you are satisfied with the way the panel lays in place, permanently adhere it to the roof panel by applying hand pressure to material, smoothing it as you go. Complete the installation process for all of the Heat Shield Insulation patterns. The final step is to apply the aluminum tape to all seams and edges of the material. Measure out a length of tape and peel back a few inches of the protective film, exposing the self-adhesive backing. Overlap the seams and edges evenly and apply hand pressure along the entire length of the tape to seal it against the Heat Shield material and the roof panel.

(Box Label)

Ford Truck

AcoustiSHIELD™

Roof to Road Solutions to Control Automotive Noise, Vibration and Heat

This is a <u>Complete</u> Truck Insulation Kit



1935-36 Ford Truck

P/N: FORD 3536-TAK

Packaged within this box are the following individual component kits:

- Floor Insulation Kit
- Cowl Insulation Kit
- Roof Insulation Kit
- Door Insulation Kit
- Damper Roller Tool

Customer/Installer: Please inspect and report any problems within 30 days of delivery.

QuietRIDE™ Solutions

3183 Hwy 71 S, Mena, AR 71953
Phone: 209-942-4777FAX: 877-720-2360
E-mail: info@quietride.com • www.quietride.com

©Quiet Ride Solutions All Rights Reserved